
1 DELCO E80 IROM MPC5676 BAM GM

1.1 PLUGIN 1720




In order to access the ECU it is necessary to use the password previously obtained through the ID operation (Trasdata BENCH mode / Genius).

This code can be found in the "System type" (Trasdata) or "Unique identification number" (Genius) fields of the generated text file.

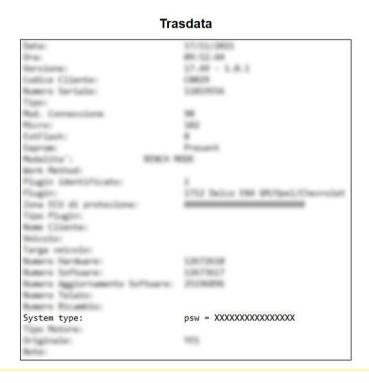





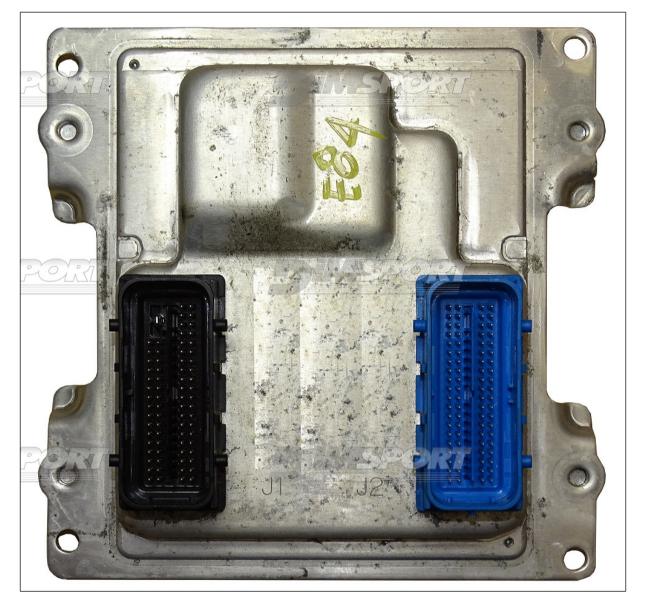

DELCO E80 IROM MPC5676 BAM GM

Open the side of the ECU that does not have connectors:



1.2 CONNECTIONS

1.2.1 BOOT/CNF1 DIRECT CONNECTION




After making all the connections, connect a stabilized power supply to the New Trasdata and make sure that the POWER LED (red) is on.

To communicate correctly with the control unit, it is necessary to use the F32GN037C/D cable.



WIRE COLOUR		DESCRIPTION
	Red	+12 V
	Black	GND
	Green	CAN L
	White	CAN H
	Blue	CNF1

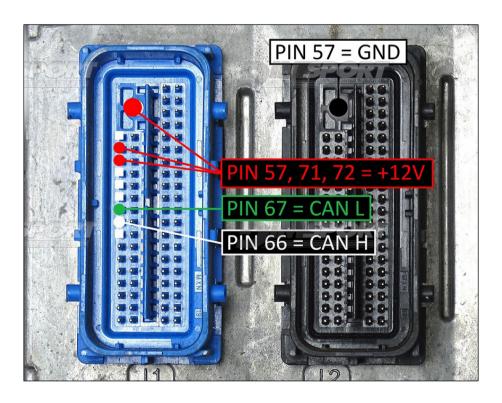

Connect the CNF1 pin to the blue wire of the cable F32GN037C/D .



Once all the connections have been made, it will be possible to communicate with the ECU by entering the password in the appropriate dialog box that will appear during the ID.

